

PYLE[®]
audio.com



User's Manual


A large, black, rugged portable speaker with a prominent silver mesh grille and blue LED lighting accents. The speaker is shown from a side-front perspective, highlighting its aggressive, industrial design.

**STREET
Blaster**

PBMSPG100

1000 Watt Rugged & Portable Bluetooth Wireless BoomBox with
NFC, Built-in Amplifier, Rechargeable Battery, AUX-input, Mic and
Guitar Inputs

LOCATION OF CONTROLS

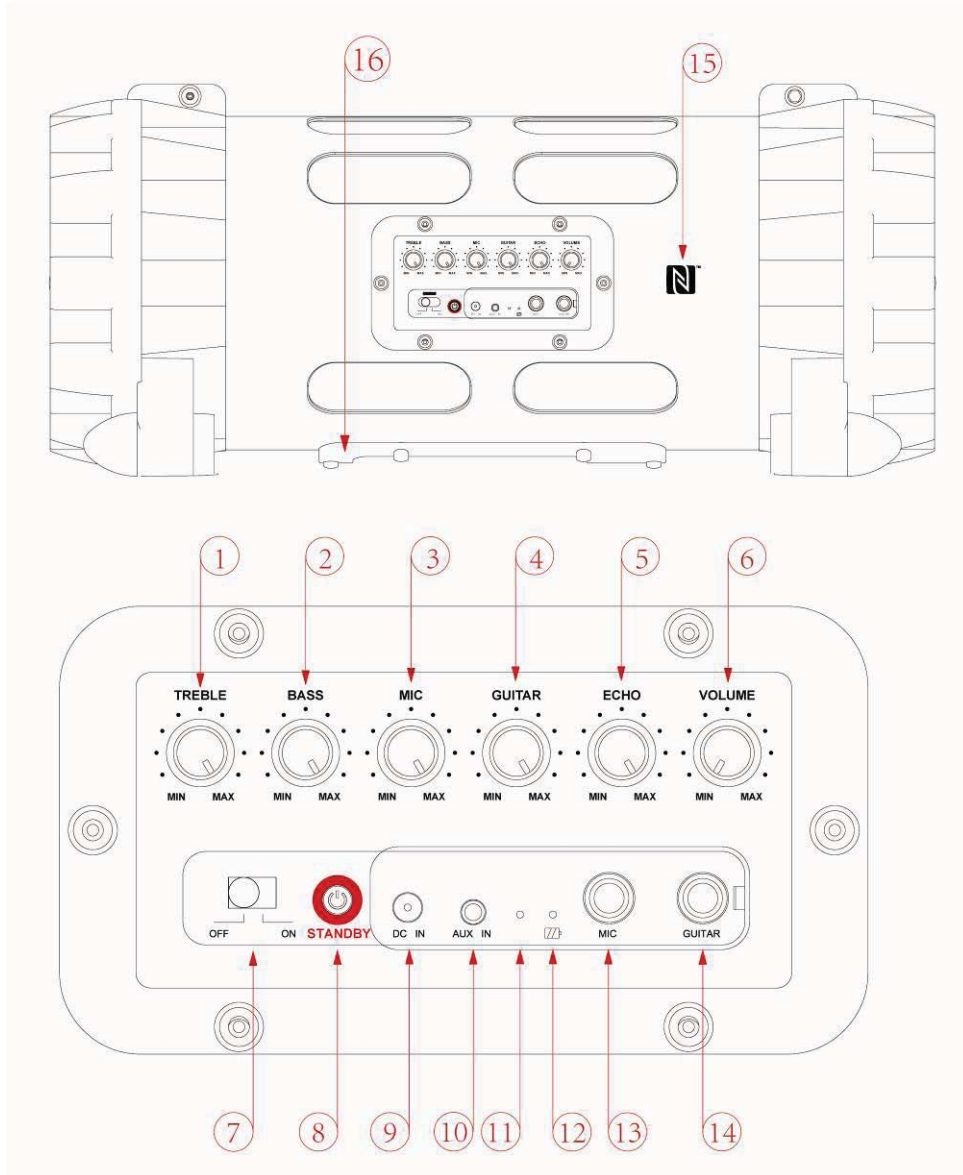

OPERATING INSTRUCTIONS

- | | |
|-----------------------------------|---------------------------|
| 1. TREBLE LEVEL CONTROL | 9. DC IN JACK |
| 2. BASS LEVEL CONTROL | 10. AUX IN JACK |
| 3. MICROPHONE INPUT LEVEL CONTROL | 11. POWER INDICATOR |
| 4. GUITAR INPUT LEVEL CONTROL | 12. BATTERY INDICATOR |
| 5. ECHO LEVEL CONTROL | 13. MICROPHONE INPUT JACK |
| 6. VOLUME LEVEL CONTROL | 14. GUITAR INPUT JACK |
| 7. POWER ON/OFF SWITCH | 15. NFC AREA |
| 8. STANDBY BUTTON | 16. BATTERY COMPARTMENT |

CHARGE THE BATTERY (IF EQUIPPED)

Before using the speaker, you must charge the battery. When the battery is charging, the **BATTERY INDICATOR** lights solidly. After the battery has fully charged, the light switches off.

1. Connect the AC adaptor to the **DC IN JACK** of the speaker firmly, and plug it into a wall outlet.
2. When the battery is fully charged, first disconnect the AC adaptor from the speaker, then from the wall outlet.

POWER SOURCE

1. Slide the **POWER ON/OFF** switch to "ON" position, the speaker is in standby mode.
2. You can now press the **STANDBY** button to turn on the speaker.
3. Slide the **POWER ON/OFF** switch to "OFF" position, and pull the AC adaptor out of the wall outlet if you want to switch off completely.

BLUETOOTH FUNCTION

PAIR THE BLUETOOTH DEVICE

Before using your speaker with a Bluetooth device for the first time, you must pair and connect it to the Bluetooth device. Press the **STANDBY** button to turn on the speaker, it will enter into the Bluetooth mode automatically, and the **POWER INDICATOR** starts to flash fast. Press the **STANDBY** button again, the **POWER INDICATOR** starts to flash slowly. The speaker is now in pairing mode.

OPERATING INSTRUCTIONS

PAIR THE SPEAKER USING NFC

1. With Near Field Communication (NFC), you can easily pair and connect the speaker to Android device with NFC.
2. If the Android device supports NFC, activate its NFC feature, and touch the NFC area of the speaker with the NFC area of your Android device. The speaker pairs and connects to the Android device automatically. For details on NFC, see the user guide of the Android device.



3. For other Bluetooth device, pair the speaker manually.

PAIR THE UNIT MANUALLY

1. Verify that the Bluetooth function of Bluetooth device is enabled.
2. Choose the Bluetooth menu in your Bluetooth device, and from the found devices, select the "P127J". If you are prompted to enter the PIN code, please enter "0000" (four zeros).
3. For more information, see the user manual of Bluetooth device.
4. After a successful pairing, play the music from the Bluetooth device.

Note:

1. Only one Bluetooth device can be connected to the speaker. If the speaker is already connected to another Bluetooth device, the speaker will not appear in the Bluetooth menu of your Bluetooth device.
2. When you turn off/on the speaker or the Bluetooth device, the speaker will connect to the last Bluetooth device it was used with automatically within 10 seconds. Otherwise, you need to connect it manually on the Bluetooth menu in your Bluetooth device.
3. Depending on the device manufacturer, some Bluetooth devices need to perform the pairing again.

AUX IN FUNCTION

1. Connect an audio cable (not included) to the **AUX IN JACK** of the speaker and to the audio output socket on the external audio devices such as MP3 player, discman, etc. The **POWER INDICATOR** turns red.
2. Play from an external audio device.

Note: When the speaker is connected to the **AUX IN JACK**, Bluetooth function is disabled.

OPERATING INSTRUCTIONS

CONNECTING A MICROPHONE/GUITAR

Using a microphone or a guitar, you can mix its sound with a source sound.

CAUTION

DO NOT connect a bass guitar to the **MIC/GUITAR INPUT JACK**, as it may damage the speaker.

1. Turn the **MIC/GUITAR LEVEL CONTROL** fully counterwise.
2. Connect a microphone or a guitar to the **MIC/GUITAR INPUT JACK** of the speaker.
3. Select the Bluetooth or AUX IN as the source.
4. Start playback of the source.
5. Turn the **MIC/GUITAR LEVEL CONTROL** to adjust the volume.

TO ADJUST THE VOLUME

Turn the **VOLUME LEVEL CONTROL** to adjust the volume of the speaker.

CONTROL THE TREBLE/BASS

Turn the **TREBLE/BASS LEVEL CONTROL** to adjust the treble/bass effect.

CONTROL THE ECHO

Turn the **ECHO LEVEL CONTROL** to adjust the echo effect.

SPECIFICATIONS

- Audio Output: 1000 watts = 500W (L) + 500W (R)
- Connectivity
 - 3.5mm Aux In Jack
 - DC IN Jack
- Power Requirement
 - AC 100-220V, 50/60Hz
 - Rechargeable Batteries (if equipped)
- Unit Dimensions: 24.5"(W) x 10"(D) x 10"(H) inches

PYLE

Follow us on



www.pyleaudio.com

IMPORTANT: Pack carefully in original package if possible. We are not responsible for damage incurred in returning items for repair. A letter stating your exact street address, daytime phone number, and the problem you are experiencing should be included. You must also enclose a copy of the original receipt as proof of date of purchase

Brooklyn, NY 11204
(718)535-1800

Monday Through Thursday. 9AM to 5PM
Friday 9AM to 12PM Eastern.